



Electronic LCD Chrono - Alarm Watches Instruction Manual

Selection of Display

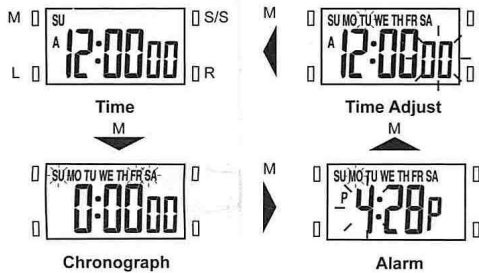


The watch change modes in the sequence show above whenever the M button is pressed.
In Chronograph or Alarm mode, pressing the S/S or R then the M button will directly invokes Time mode.

 Date Display



In Time mode, pressing the S/S to show the current date.

Time and Date Setting

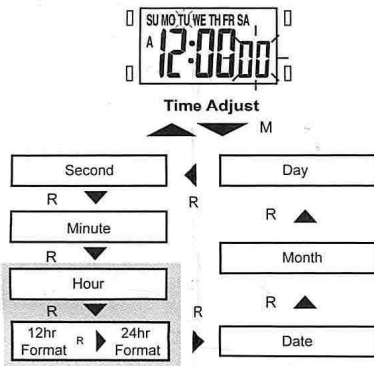


Under time adjust mode, press S/S to set value of the flashing digit. Press R to confirm and select the following digit. Press M to exit the Time adjust mode.
NOTE: Under Hour setting, users are able to select 12/24 Hours format. 12 hours format: confirm the hours setting when A/P are shown. 24 Hours format: confirm the hours setting when H are shown.

Hourly Chime



Under Time mode, press R and M to select hourly chime ON or OFF.

Chronograph

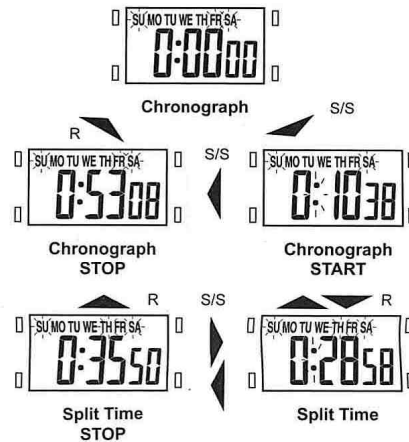

Alarm Setting




Under alarm mode, press S/S to set value of the flashing digit. Press R to confirm and select the following digit. Pressing the R button stops the alarm. The alarm can also be stopped by pressing the S/S button. In this case, the alarm will resume after 5 minutes.

Alarm Setting on/off



Under Time mode, press S/S and R to select alarm ON or OFF. When Alarm is ON "■■■" icon will be shown.

EL Backlight

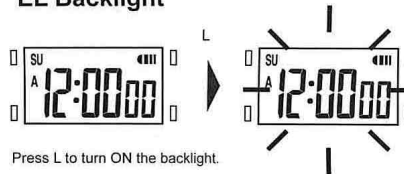

Specifications

Display	Hour/Min/Sec, AM/PM, 12/24H
TIME	Month/Date/Day
CALENDAR	Hour/Min, (AM/PM)
ALARM	Min, Sec, 1/100 Sec (up to 30 min)
STOPWATCH	Hour/Min/Sec, (Up to 24 hour)
BACK LIGHT	Electroluminescent lamp